


## USER OPERATING INSTRUCTIONS

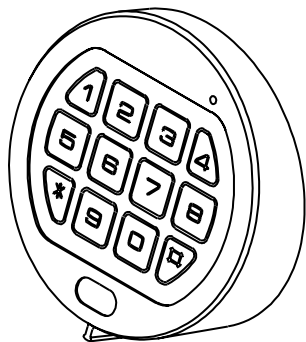

### FEATURES

See *Manager Instructions for additional features.*

#### USER Combination

- Open Lock
- Change Combination

#### WRONG TRY PENALTY

- Four (4) consecutive invalid combination initiates five (5) minute delay period.

#### LOW BATTERY WARNING

- Repeated LED flashing and beeping during opening indicates battery is low and needs immediate replacement.

#### AUDIO AND VISUAL SIGNAL

- Double signal - two (2) LED flashes and two (2) beeps - indicates entry is valid or accepted.
- Triple signal - three (3) LED flashes and three (3) beeps - indicates invalid or not accepted.

### OPENING THE LOCK

1. Enter valid six (6) digit combination. (Factory set to 1-2-3-4-5-6)
2. The lock will confirm a valid combination entry with a double signal.
3. Within four (4) seconds, turn handle to the open position.
4. Pull door open.

- **Invalid Combination Entry** - Lock will signal three (3) times.

#### WRONG TRY PENALTY

- Entry of four (4) consecutive invalid combinations starts a five (5) minute delay period.
  - LED flashes red at ten (10) second intervals.
- At the end of the delay period, two more consecutive invalid combinations will restart an additional five (5) minute delay period.

---

**NOTE:** *Entry will not respond to keystrokes during delay period.*

---

### CHANGING YOUR COMBINATION

#### **ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN**

1. Enter "zero" six times.
  2. Enter your existing six (6) digit combination one time.
  3. Enter your NEW six (6) digit combination two times.
  4. If a mistake is made wait thirty (30) seconds and repeat steps 1 - 3.
  5. Test lock operation several times before closing the door.
- 

**CAUTION:** When selecting a combination do not use birthday or other predictable data that could give correlation between the user and combination. Keep the combination secret.

---

- **Valid Combination Entry** - Double signal after valid six (6) digit combination is entered.
- **Invalid Combination Entry** - Triple signal indicates old combination is still valid.

### BATTERY LOW WARNING

- Repeated LED flashing and beeping during an opening indicates that the battery is low and needs immediate replacement.
- Uses one (1) 9-Volt alkaline battery only. (Example: Duracell™ or Eveready™ alkaline batteries.) It is recommended that batteries be replaced at least once a year.

***If battery is depleted and will not allow lock to open, follow instructions below. Lock contains a non-volatile memory; even with the batteries removed the lock will retain all programming.***

### CHANGING YOUR BATTERY


1. Remove black plastic battery compartment cover (located at the bottom of the keypad) by gently pulling downward on its handle.
2. Allow the battery and its attached leads to drop down and out of the battery compartment. If it does not drop, gently pull on the battery until it does.
3. Remove the connector by unsnapping it from the two terminals on the top of the battery.

---

**CAUTION!** *Hold onto battery terminal connector to avoid pulling the wires out of housing.*

---

4. Press and hold the zero(0) key for ten (10) seconds before installing a new battery.
5. Connect a new 9-Volt alkaline battery to the battery clip.
6. Push the battery and the leads completely into the battery compartment.
7. Install the battery cover by placing one side of the cover in position and then pressing the other side into position with your finger.

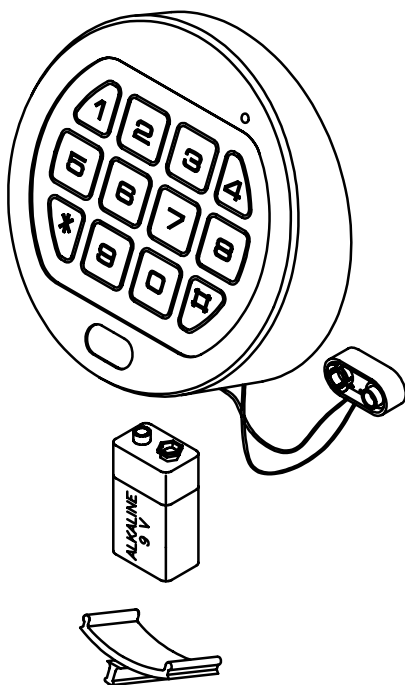

***Mounting Instructions available at [www.kaba-mas.com](http://www.kaba-mas.com).***