

## Cloning the NSN11T2 Key Blank With the RW4, RW4 Plus, Ilco EZ®-Clone, Ilco EZ®-Clone Plus


*These instructions do not apply to RW2 or RW3 machines*

The NSN11T2 key blank is used in North America for the 1999-2000 Nissan Maxima and Infiniti I30.

Due to software updates, the procedure for cloning Nissan/Infiniti vehicles using the NSN11T2 has changed.

Below are the new instructions for cloning a working key.

1. RW4 or RW4 Plus - Choose "Copy" from the main menu.  
Ilco EZ®-Clone or Ilco EZ®-Clone Plus - proceed to step 2.
2. Place the original working key (customer key) into the key slot (read/write antenna), blade down.
3. Place a new NSN11T2 key blank into the key slot (read/write antenna) along with the original working key with the blade up (see image at right).
4. Press "Read" (Rd)
5. When prompted to REMOVE KEY, remove both keys.
6. The screen prompt will then read "INSERT BLANK KEY."
7. Reinsert ONLY the new NSN11T2 key blank into the slot (read/write antenna), blade down.
8. Press "Write" (Wr)
9. Operation complete, you now have a new working key.

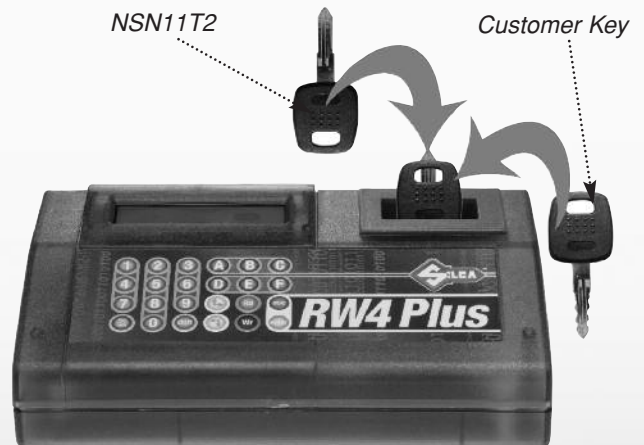

**IMPORTANT:** Both keys must fit into the key slot.

Customer Key –blade down  
NSN11T2 Key Blank – blade up