

*iq*WIK DATA

PROGRAMMING GUIDE®



 MARKS USA

MARKS USA
5300 New Horizons Blvd. Amityville, NY 11701
631-225-5400 • 1-800-526-0233 • Fax 631-225-6136
www.marksusa.com

Congratulations, you have just purchased the i-Qwik DATA Series lockset from Marks USA. This lockset, designed for easy installation, will provide years of reliable service when properly installed and maintained.

This manual is designed to act as a guide through the many features & functions of your i-Qwik Data Series Stand-Alone Access Control System.

Please take the time to read it thoroughly and follow the instructions carefully so that your experience will be positive and trouble free.

Marks USA would like to thank you for selecting the i-Qwik Data Series for your access control needs.



5300 New Horizons Blvd.
Amityville, NY 11701

LIVE TECH SUPPORT 8am - 8pm EST Mon- Fri

Toll Free: 800 • 526 • 0233

In NY: 631 • 225 • 5400

Fax: 631 • 225 • 6136

E-mail: techsupport@marksusa.com

For more information about the i-Qwik Line, i-Que series, the Complete Marks USA Product line, templates & manuals visit our website @ www.marksusa.com

Table of Contents:

Section 1 - i-Qwik DATA Information

	<u>Function #</u>	<u>Min. Required Group Number</u>	<u>Page</u>
Before You Start, Important Definitions			Page 1
Important Definitions			Page 1
Important Keys			Page 1
LED Indicators			Page 1
Initialize Lock			Page 1
Create Great Grand Master		System Manager	Page 2
Adding & Deleting User Codes	Function 01	Master 03	Pages 2-3

Section 2 - Lock Configuration

PIN Only Entry	Function 32	Grand Master 02	Page 3
Change User PIN	Function 08	Groups 01 to 99	Page 3
Deny/Restore Group Access	Function 10	Master 03	Page 4
Change Group Association	Function 07	Master 03	Page 4
Set Access Level	Function 11	Master 03	Page 4
Define Open Time	Function 18	Master 03	Page 4
Multiple Code Entry	Function 33	Master 03	Page 4
Manual Passage Mode	Function 30	Master 03	Page 5
Lock Audio	Function 34	Master 03	Page 5
Relay State Selection	Function 35	Master 03	Page 5
Fail Safe/Fail Secure	Function 36	Master 03	Page 5
Terminator On/Off	Function 37	Master 03	Page 6
Panic Alarm	Function 38	Master 03	Page 6
Privacy Mode/Secretary's Button	Function 39	Master 03	Page 6
Disable/Enable Three Strike Lockout	Function 40	Grand Master 02	Page 6

Section 3 - Scheduling

Overview: Programming the Schedule Functions, Delete Set Schedules, Day Codes, Open and Close times			Page 7
Set Time	Function 12	Grand Master 02	Page 7
Set Date	Function 13	Grand Master 02	Page 7
Basic Schedule	Function 02	Master 03	Page 8
Group Schedule	Function 03	Master 03	Page 8
User Schedule	Function 04	Master 03	Page 8
Passage Schedule	Function 05	Master 03	Page 8
Temporary User	Function 06	Master 03	Page 9
Holiday Maintenance	Function 09	Master 03	Page 9
First Supervisor to Arrive	Function 31	Master 03	Page 9

Section 4 - Software Interface

Download Audit Trail	Function 15	Security Guard 05	Page 9
Upload Lock Information	Function 14	Security Guard 05	Page 10

Section 5 - Lock Maintenance

Clear Memory	Function 16	Grand Master 02	Page 10
Battery Status Check	Function 17	Master 03	Page 10
Memory Upgrade	Function 20	Great Grand Master 01	Page 10
Battery Information			Page 11
Connection Diagram			Page 11
Reset the i-Qwik DATA back to Factory Default			Page 11
Glossary			Page 12
Troubleshooting			Page 12
Index			Page 13

SECTION 1; I-QWIK DATA INFORMATION

BEFORE YOU START! BEFORE YOU START! BEFORE YOU START!

IMPORTANT DEFINITIONS:

1. **FACTORY CODE:** is 9991234, and is used to initialize the lock for a new installation or full reset. This code must be entered to set the GREAT GRAND MASTER (GGM). After the GGM code is set, the FACTORY CODE will no longer be valid and is only re-enabled after a full reset, see page 11.
2. **LOCK ID:** A unique six digit number entered during initialization defining the specific lock.
3. **USER IDENTIFICATION NUMBER (UID):** A unique number assigned to each User with 2, 3 or 4 digits.
4. **GROUP:** One or several Users, all of whom have the same access to the locks, categorized by a two digit GROUP number.
5. **PERSONAL IDENTIFICATION NUMBER (PIN):** A unique combination of 3, 4, 5 or 6 keypad letters, numbers or both. (Letters or numbers may be used multiple times to increase the total number of combinations).
6. **USER CODE:** Unique combination of UID and PIN codes, in that order, having up to 10 total digits.
7. **GREAT GRAND MASTER (GGM):** Code required by the SYSTEM MANAGER to perform all programming functions. It replaces the FACTORY CODE. This code can also open the lock.
8. **SYSTEM MANAGER:** Person establishing the GGM and responsible for highest level of programming. Can establish lower levels of programming for other Users or Groups.
9. **PROGRAM INSTRUCTION:** Series of key strokes used to enter a function.

IMPORTANT KEYS:

1. **TERMINATOR KEY (*):** Acts like the "Enter" key on a computer, and is used to add or confirm codes on the keypad.
2. **PROGRAMMING KEY (#):** After a valid MASTER CODE is entered, this key is depressed to enter the programming mode. This key can also be used as a time saving feature, allowing the entry of multiple functions. At the end of any PROGRAMMING INSTRUCTION, replace the last * with a # to return to FUNCTION NUMBER input eliminating the need to re-enter MASTER CODE.

LED INDICATOR:

LED INDICATING GREEN (NORMAL MODE):

1. Denotes lock enabled to open. Will flash green after entering valid MASTER CODE and TERMINATOR KEY (*).

LED INDICATING RED (NORMAL MODE):

1. Denotes a wrong MASTER CODE entry to open the lock.
2. Denotes wrong MASTER CODE entry 3 consecutive times and disables keypad for 20 seconds. If another wrong MASTER CODE is entered, the keypad is disabled for 40 seconds.

LED INDICATING RED (PROGRAMMING MODE):

1. Denotes incorrect entry or error and vacates programming mode.
2. Programming mode vacated if no key entry within 5 seconds.

1. INITIALIZE LOCK:

Initializing the lock with a unique 6 digit code assigns a LOCK ID # to each specific lock. Using keypad, enter the FACTORY CODE 9991234, the # key, and the 6 digit LOCK ID # (usually starting with 000001), and finally the # key.

9991234 #	Lock ID #
-----------	-----------

THIS CODE WILL NOT OPEN THE LOCK

2. CREATE GREAT GRAND MASTER (GGM):

This code is required by the SYSTEM MANAGER to perform all programming functions. In any lock system the number of digits used for the UID of each User must be the same as the GGM.

Example: If the GGM's code is 3 digits, all Users must have a 3 digit UID code.

Also, the number of digits used for the PIN of each User must be the same as the GGM.

Example: If the GGM's PIN is 5 digits, all Users must have a 5 digit PIN code.

Using keypad, enter the FACTORY CODE 9991234, the * key, the UID of the system manager (either 2, 3 or 4 digits), the # key, the PIN of the system manager (either 3, 4, 5 or 6 digits), and finally, the # key.

FACTORY CODE * UID # PIN #

9991234 *	UID #	PIN #
-----------	-------	-------

The GGM is now established for the SYSTEM MANAGER only: A combination of their UID followed by their PIN.

Lock is now initialized.

SYSTEM MANAGERS ACCESS TO THE LOCK:

Enter UID plus PIN of the GGM, then the * key. The lock will open!

Enter to open lock	GGM *
---------------------------	--------------

GROUPS:

In order to organize the management of individual Users, they can be put into 98 different GROUPS. Users in the same GROUP will have the same access rights. Users in different GROUPS can have varied access rights from other GROUPS.

Each GROUP is assigned a 2 digit GROUP NUMBER from 02 to 99.

ALL USER MUST BE ASSIGNED TO A GROUP.

Depending on your assigned GROUP, you may or may not be able to program the lock, and may also have restricted access.

The SYSTEM MANAGER is automatically assigned to group 01, and can assign Users to all other groups. GROUPS 02 through 08 are management GROUPS, with 24/7 access to the locks, and can change various settings used during access by other User GROUPS.

The Table of Contents (inside front cover) lists the minimum GROUP NUMBER required for rights to program EACH specific function.

Higher GROUPS can override access functions of lower GROUPS.

Example: GROUP (02) can override access functions to GROUP (03), etc.

GROUP 09 is a special group that allows the lock to be placed in passage mode when the code is entered. The lockset will re-lock when code is entered again or at midnight of that day.

GROUPS 10 through 99 have no programming rights. Their access may be restricted by schedules or during holidays.

They may, however, change their own PIN when authorized by the SYSTEM MANAGER.

FUNCTION 01:

To Add Users:

Enter MASTER CODE (UID and PIN), the # key, FUNCTION NUMBER (01), the * key, the Users UID you want to include in the GROUP, the * key, the 2 digit GROUP NUMBER, the * key, the User's PIN, the * key twice.

MASTER UID & PIN #	01 *	UID *	Group No. *	PIN *	*
-------------------------------	-------------	--------------	--------------------	--------------	----------

FUNCTION 01: Cont'd*Min. Group Number: Master 03*

To Delete Users:

Enter MASTER CODE (UID and PIN), the # key, FUNCTION NUMBER (01), the * key, the Users UID you want to delete, the * key, the 0 key in place of the GROUP NO., the * key twice.

MASTER UID & PIN #	01 *	UID to be Deleted *	0 *	*
--------------------	------	---------------------	-----	---

NOTE: GROUP NUMBERS ARE NOT USED TO ACCESS THE LOCK

Users Access the Lock:

Enter User's UID plus User's PIN then the * key. The lock will open!

UID	PIN *
-----	-------

Users Entry to Programming Mode:

Enter User's UID plus User's PIN then the # key.

UID	PIN #
-----	-------

SECTION 2; LOCK CONFIGURATION

FUNCTION 32: PIN Only Entry*Min. Group Number: Grand Master 02*

The PIN Only mode allows management to shorten the length of the code that the User must enter to gain access. The code can not be shorter than the PIN.

PIN Only Mode (for Access PIN Only)			
Master UID & PIN #	32 *	0 *	*

UID & PIN Required - Default			
Master UID & PIN #	32 *	1 *	*

NOTE: PROGRAM MODE REQUIRES THAT UID AND PIN BE ENTERED

FUNCTION 08: Change User PIN*Min. Group Number: Groups 01 - 99*

This function gives users the ability to change their PIN. (User must know their UID & PIN to perform this function)

UID & PIN #	08 *	New PIN *	Verify PIN *	*
-------------	------	-----------	--------------	---

FUNCTION 10: Deny/Restore Access*Min. Group Number: Master 03*

This function is used to temporarily deny access to User Groups (10-99) without removing them from the memory.

To DENY Access To A Group				
MASTER UID & PIN #	10 *	Group to be Denied Access *	1 *	*

To RESTORE Access To A Group				
MASTER UID & PIN #	10 *	Group to be Restored Access *	0 *	*

FUNCTION 07: Change Group Association*Min. Group Number: Master 03*

This function allows management to change the Group an existing User is assigned to.

MASTER UID & PIN #	07 *	User UID * of Existing User	New Group Number *	*
--------------------	------	--------------------------------	--------------------	---

FUNCTION 11: Set Access Level*Min. Group Number: Master 03*

Access can be denied to Users in Groups lower then the Group number entered. This function **CANNOT** deny access to Groups 03 (*Master*), 02 (*Grand Master*), or 01 (*Great Grand Master*). To allow all Groups access the Group level setting must be set to "99".

MASTER UID & PIN #	11 *	Group Level *	*
--------------------	------	---------------	---

FUNCTION 18: Define Open Time*Min. Group Number: Master 03*

This function will set the time delay. The lock will stay unlocked after a valid user code has been entered. The time delay can be set from 1 to 9 seconds. (*Default setting is 3 seconds*)

MASTER UID & PIN #	18 *	Single Digit 1-9 Seconds *	*
--------------------	------	-------------------------------	---

FUNCTION 33: Multiple Code Entry*Min. Group Number: Master 03*

For higher security the lock can be set to require two User codes be entered before access is granted. For even higher security it can be required for one of the Users to be in a Manager Group.

One User Code Required - Default			
MASTER UID & PIN #	33 *	0 *	*

Two User Codes Required			
MASTER UID & PIN #	33 *	1 *	*

Two User Codes; One Must Be A Manager			
MASTER UID & PIN #	33 *	2 *	*

FUNCTION 30: Manual Passage Mode*Min. Group Number: Master 03*

This function puts the lock in an unlocked state, granting free access (*no code required*) to all Users, until lock is returned to the locked state. Returns to locked state at midnight.

Closed - Locked - Default			
MASTER UID & PIN #	30 *	0 *	*

Open - Unlocked			
MASTER UID & PIN #	30 *	1 *	*

FUNCTION 34: Lock Audio*Min. Group Number: Master 03*

If the Audio is set to "ON" the lock will beep with each key pressed (on by default).

Audio Off			
MASTER UID & PIN #	34 *	0 *	*

Audio On - DEFAULT			
MASTER UID & PIN #	34 *	1 *	*

FUNCTION 35: Relay State Selection*Min. Group Number: Master 03*

The following function applies to the state of the relay as follows.

For Normally Open (NO)			
MASTER UID & PIN #	35 *	0 *	*

For Normally Closed (NC)			
MASTER UID & PIN #	35 *	1 *	*

FUNCTION 36: Fail Safe/Fail Secure*Min. Group Number: Master 03*

Use this function to create a power reserve to ensure if the Low Battery Warning is not heeded, and the battery pack fails, the lock will fail in the selected state.

Lock Fails In The Last State That It Was In When The Power Was Lost - Default			
MASTER UID & PIN #	36 *	0 *	*

Fail Safe - Lock Will Ensure That Power Is Reserved To Fail In The Unlocked Or Safe Position			
MASTER UID & PIN #	36 *	1 *	*

Fail Secure - Lock Will Ensure That Power Is Reserved To Fail In The Locked Or Secured Position			
MASTER UID & PIN #	36 *	2 *	*

FUNCTION 37: Terminator On/Off*Min. Group Number: Master 03*

This function will switch the “*” terminator on or off. Selecting off automatically sets lock to PIN Only Mode. To gain access with Terminator Off, simply enter your PIN code. With Terminator On, you are required to enter “*” after your code.

Terminator OFF			
MASTER UID & PIN #	37 *	0 *	*

Terminator ON- Default			
MASTER UID & PIN #	37 *	1 *	*

NOTE: TO ENTER PROGRAM MODE WITH TERMINATOR OFF, YOU MUST FIRST PRESS THE “#” KEY BEFORE THE MASTER CODE!

FUNCTION 38: Panic Alarm*Min. Group Number: Master 03*

This function is intended to be wired to an alarm panel or siren. When enabled, any User can enter 911* and the lock will close a contact thus activating the alarm system.

Disabled - Default			
MASTER UID & PIN #	38 *	0 *	*

Enabled, Alarm Activated			
MASTER UID & PIN #	38 *	1 *	*

FUNCTION 39: Privacy Mode/Secretary's Button*Min. Group Number: Master 03*

Privacy Mode/Secretary’s button (Secretary’s button is default):

The Privacy Mode option will have a button installed on the inside housing. When pressed it will block out keypad entries (except the GGM, GM and Master codes). When the inside lever is pressed the request to exit switch will reset the keypad back to normal operating mode.

Privacy Mode			
MASTER UID & PIN #	39 *	1 *	*

FUNCTION 40: Disable/Enable Three Strike Lockout . .*Min. Group Number: Grand Master 02*

The lock responds to three incorrect codes in a row by displaying a red light and shutting down the keypad for 20 seconds. Subsequent attempts with an incorrect code will increase the time to 40 seconds maximum. Disabling this feature allows an unlimited number of incorrect codes to be entered without a lockout.

Disable			
MASTER UID & PIN #	40 *	0 *	*

Enable			
MASTER UID & PIN #	40 *	1 *	*

SECTION 3; SCHEDULING

Programming the Schedule Functions:

The scheduled functions will allow you to customize your lock and grant/deny access to your Users by times and day/days of the week. The time and date should be set first before programming any schedules. If the time and date are incorrect in the lock, the schedules will not function correctly. See function 12; Set Time (see below) and Function 13; Set Date (see below)

Delete Set Schedules:

Enter "0" in place of the day code, then "✳" to exit. This will delete all set schedules for that function.

NOTE: Schedules do not affect Users in Groups 02-09. These User Groups are management levels and will override all set schedules and holidays. The schedule functions will affect Users in Groups 10-99 ONLY.

Day Codes:

Allows selection of the day/days of the week that schedule is active. The day code is a two digit number.

Day Codes:

- 01-07 Individual days of the week (example: Monday = 01)
- 08 Weekdays (Monday through Friday)
- 09 Weekends (Saturday and Sunday)
- 10 Even Days (Tuesday and Thursday)
- 11 Odd Days (Monday, Wednesday & Friday)
- 12 Override Preprogrammed Holidays
- 13 All Days

Open and Close Times:

Use the 24 hour Military Time format for entering Start and End times for schedules. See chart below.

FUNCTION 12: Set TimeMin. Group Number: Grand Master 03

The time (HHMM) must be set prior to setting any holidays. See the Military time chart below for help.

MASTER UID & PIN #	12 *	HHMM *	*
--------------------	------	--------	---

Example: 3:30pm = 1530

Daylight savings time is enabled by default. To disable daylight savings add a "0" (zero) at the end of the time entry.

Example: 3:30pm = 15300 Daylight savings disabled

Standard Time	Military Time	Standard Time	Military Time
1:00 am	0100	1:00 pm	1300
2:00 am	0200	2:00 pm	1400
3:00 am	0300	3:00 pm	1500
4:00 am	0400	4:00 pm	1600
5:00 am	0500	5:00 pm	1700
6:00 am	0600	6:00 pm	1800
7:00 am	0700	7:00 pm	1900
8:00 am	0800	8:00 pm	2000
9:00 am	0900	9:00 pm	2100
10:00 am	1000	10:00 pm	2200
11:00 am	1100	11:00 pm	2300
12:00 am	1200	12:00 pm	2400

FUNCTION 13: Set DateMin. Group Number: Grand Master 03

The date must be set prior to setting any holidays. This function will set the Month, Day and Year and Day of the Week.

There are 2 formats available: Standard (default: MM - DD - YY) or European (DD - MM - YY)

MASTER UID & PIN #	13 *	MMDDYY *	*
--------------------	------	----------	---

NOTE: FOR EUROPEAN DATE FORMAT SET: DD MM YY "0" (zero) *

FUNCTION 02: Basic ScheduleMin. Group Number: Master 03

This function is used to simplify scheduling by creating one schedule for all Users (in Groups 10-99). May be used in conjunction with Passage and Holiday Schedules. Time entered in military time format (HHMM).

MASTER UID & PIN #	02 *	Day Code *	HHMM * (Open Time)	HHMM * (Close Time)	*
--------------------	------	------------	--------------------	---------------------	---

NOTE: The Basic Schedule cannot be used with the Group Schedule (03) or User Schedules (04).

TIME MUST BE ENTERED IN MILITARY TIME FORMAT!

Day Codes:

- 01-07 Individual days of the week (example: Monday = 01)
- 08 Weekdays (Monday through Friday)
- 09 Weekends (Saturday and Sunday)
- 10 Even Days (Tuesday and Thursday)
- 11 Odd Days (Monday, Wednesday & Friday)
- 13 All Days

FUNCTION 03: Group ScheduleMin. Group Number: Master 03

This schedule will apply to all the Users in the specified Group (10-99). Time entered in military time format (HHMM).

MASTER UID & PIN #	03 *	Day Code *	Group No. *	HHMM * (Open Time)	HHMM * (Close Time)	*
--------------------	------	------------	-------------	--------------------	---------------------	---

TIME MUST BE ENTERED IN MILITARY TIME FORMAT!

Day Codes:

- 01-07 Individual days of the week (example: Monday = 01)
- 08 Weekdays (Monday through Friday)
- 09 Weekends (Saturday and Sunday)
- 10 Even Days (Tuesday and Thursday)
- 11 Odd Days (Monday, Wednesday & Friday)
- 12 Override Preprogrammed Holidays
- 13 All Days

FUNCTION 04: User ScheduleMin. Group Number: Master 03

The User schedule gives additional access rights to a specific User. Time entered in Military time format (HHMM).

MASTER UID & PIN #	03 *	Day Code *	UID *	HHMM * (Open Time)	HHMM * (Close Time)	*
--------------------	------	------------	-------	--------------------	---------------------	---

The **UID** is the User ID of the User to be scheduled.

TIME MUST BE ENTERED IN MILITARY TIME FORMAT!

Day Codes:

- 01-07 Individual days of the week (example: Monday = 01)
- 08 Weekdays (Monday through Friday)
- 09 Weekends (Saturday and Sunday)
- 10 Even Days (Tuesday and Thursday)
- 11 Odd Days (Monday, Wednesday & Friday)
- 12 Override Preprogrammed Holidays
- 13 All Days

FUNCTION 05: Passage ScheduleMin. Group Number: Master 03

This function allows the lock to be placed in an unlocked state automatically for a predetermined time period.

Time entered in Military time format (HHMM).

MASTER UID & PIN #	05 *	Day Code *	HHMM * (Open Time)	HHMM * (Close Time)	*
--------------------	------	------------	--------------------	---------------------	---

NOTE: If needed, Manual Passage Mode (Function 30, page 5) or a User assigned to Group 9 will override this schedule until midnight.

TIME MUST BE ENTERED IN MILITARY TIME FORMAT!

Day Codes:

- 01-07 Individual days of the week (example: Monday = 01)
- 08 Weekdays (Monday through Friday)
- 09 Weekends (Saturday and Sunday)
- 10 Even Days (Tuesday and Thursday)
- 11 Odd Days (Monday, Wednesday & Friday)
- 13 All Days

FUNCTION 06: Temporary User ScheduleMin. Group Number: Master 03

This function allows you to restrict an existing Users access by a date range.
Temporary User Schedules do not delete and must be maintained or access repeats annually.

MASTER UID & PIN #	06 *	UID *	MMDD * (Start Date)	MMDD * (End Date)	*
--------------------	------	-------	------------------------	----------------------	---

FUNCTION 09: Holiday Maintenance

Setting holidays will block access to Users in Groups 10 - 99 during these periods.

NOTE: Dates are set by month/day (MMDD) format. The i-Qwik DATA does not track the year of the holiday, so holidays that occur on different dates each year will have to be manually adjusted each year. Holidays are not automatically removed from memory. It is suggested to maintain the holiday schedule yearly.

Example = 1225 = Christmas Day. This holiday recurs each year.

Holidays (such as Thanksgiving) that fall on different dates each year must be manually adjusted each year. Also, you may enter a shutdown as one event by entering the start date and end date.

Example: Christmas / New Year week Start = 1225 End = 0101 is an eight day period.

To SET A Holiday				
MASTER UID & PIN #	09 *	MMDD * (Start Date)	MMDD * (End Date)	*

To DELETE ALL Set Holidays			
MASTER UID & PIN #	09 *	0 *	*

FUNCTION 31: First Supervisor To ArriveMin. Group Number: Master 03

When enabled, this function will delay scheduled access until a management code has been entered. Once a managers code (Groups 1-4) has been entered access is granted according to set schedules. **NOTE: Time must be set for this function to work!**

DISABLED, Users Will Have Access - Default			
MASTER UID & PIN #	31 *	0 *	*

ENABLED, Users Will Be Denied Access Until A Manager Enters Their Code			
MASTER UID & PIN #	31 *	1 *	*

SECTION 4; SOFTWARE INTERFACE

FUNCTION 15: Download Audit TrailMin. Group Number: Security Guard 05

This function downloads the locks history of events to the i-Dat. For more information on the i-Dat and software see the i-Dat software manual.

MASTER UID & PIN #	15 *	Enter number of events to be downloaded	*	Shows # of events received	*
--------------------	------	---	---	-------------------------------	---

NOTE: The Memory Upgrade Level will determine the number of events available for audit. The i-Dat must be in proper alignment with the IR ports (resting centered on handle).

FUNCTION 14: Upload Lock InformationMin. Group Number: Security Guard 05

This function uploads information from the i-Dat to the lock.

MASTER UID & PIN #	14 *	Shows # of records uploaded	*
--------------------	------	-----------------------------	---

NOTE: The Memory Upgrade Level will determine the number of users that may be uploaded. The i-Dat must be in proper alignment with the IR ports (resting centered on the handle).

SECTION 5; LOCK MAINTENANCE

FUNCTION 16: Clear MemoryMin. Group Number: Grand Master 02

If it becomes necessary to reset the memory of the i-Qwik DATA, there are two options instead of the Full Reset Option.

Delete ALL the Users, Schedules and Holidays. See also "Resetting the i-Qwik DATA" at the bottom of page 11.					
MASTER UID & PIN #	UID & PIN #	16 *	16 *	0 *	*
Delete ONLY Schedules and Holidays					
MASTER UID & PIN #	UID & PIN #	16 *	16 *	1 *	*

FUNCTION 17: Battery Check Status Min. Group Number: Master 03

This function manually checks the battery status of the i-Qwik DATA. The LED on the keypad will display visual indicator.

MASTER UID & PIN #	17 *	Watch LED	*
--------------------	------	-----------	---

- Green Two Yellow LED flashes indicate full power
- Red Yellow then Red LED flashes indicate half power
- Red - Red Two Red LED flashes indicate that the batteries need to be changed

NOTE: IF THE VOLTAGE OF THE BATTERY PACK FALLS TO 4.2v DC, THE I-QWIK DATA WILL BEEP EVERY HOUR INDICATING LOW BATTERY STATUS.

FUNCTION 20: Memory UpgradeMin. Group Number: Great Grand Master 01

The standard i-Qwik DATA has a 320 User and 1600 Event Audit Trail but can be upgraded as follows:

Memory Upgrade	Part #
512 Users / 2208 Event Audit Trail	U3
864 Users / 3124 Event Audit Trail	U4
1504 Users / 2520 Event Audit Trail	U5
3008 Users / 1180 Event Audit Trail	U6

This function permanently upgrades the i-Qwik DATA's memory. The upgrade code is obtained from the factory. The upgrade code is an eight digit number specifically assigned for the serial number of the lock being upgraded and **WILL NOT** upgrade any other serial number.

NOTE: Upon entering the upgrade code, **ALL DATA IN THE LOCK WILL BE LOST**. Be sure your important information is recorded in your computer so that the saved data can be uploaded to the lock after the upgrade. Follow these easy steps to perform the memory upgrade.

MASTER UID & PIN #	20 *	-----* (8 Digit Code)	*
--------------------	------	--------------------------	---

NOTE: The LED glows red for several seconds before flashing green and the lock will beep. Now perform the steps outlined on page 2 for initializing the lock with LOCK ID and GREAT GRAND MASTER, then re-enter your information either by keypad or i-Dat upload (Function 14, top of page).


Battery Information:

THE i-Qwik DATA IS SHIPPED WITH 4 "AA" ALKALINE BATTERIES. The life span of the batteries has been tested in two different ways. The first test was performed to see how many operations could be performed repeatedly before a failure. The test averaged 150 thousand operations. The second test was performed over time for normal operations. This test revealed that the i-Qwik DATA batteries would last approximately 4 years at 80-90 thousand operations. Using the factory settings, the lockset is set for optimized power usage.

CHANGING THE BATTERIES: When the batteries need to be changed, you will have 10 minutes to remove the old batteries and install the four new "AA" batteries before memory is affected. **IT IS RECOMMENDED TO USE ONLY ALKALINE BATTERIES** due to the predetermined power settings in the lock. The alkaline battery has a gradual curve in the drop off voltage. This curve determines the power settings for the two stages of battery warnings and the Fail Secure settings. A lithium battery differs from an alkaline battery in the life cycle of the battery cell. A lithium battery has a very sharp drop off voltage, going from fully charged to a dead cell quickly. This makes monitoring the voltage settings impossible.


TWO STAGE LOW BATTERY WARNING: The i-Qwik DATA has a two-stage low battery warning. The first warning stage will add a double beep and Red LED when the user enters their code. The second warning stage will be a double beep every hour. **BATTERIES SHOULD BE CHANGED IMMEDIATELY.** Double beeps will occur until the batteries fail. To ensure the lock fails in a locked or unlocked mode, use Function 36 Fail Secure (page 5) or the lock will fail in the last state, either open or closed. The batteries can also be checked manually using Function 17 Battery Status Check (page 10).

CONNECTION DIAGRAM

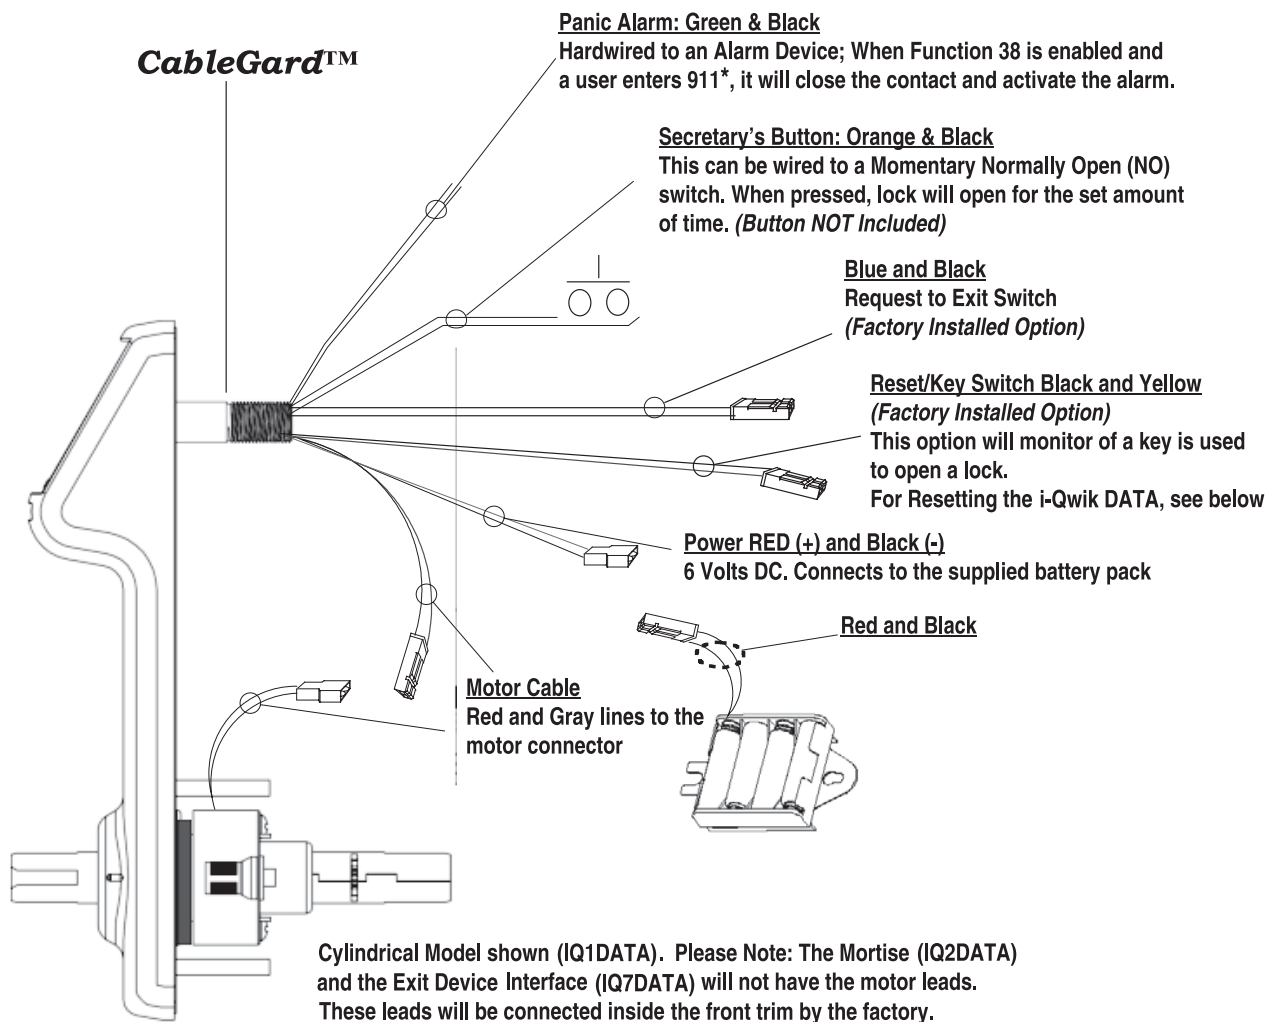

Reset The i-Qwik DATA Back To Factory Default:

- Open battery cover (top of housing on inside of door)
- Disconnect the batteries
- Locate the Yellow and Black cable (behind battery pack)
- Insert both ends of the reset wire (or paper clip) into the holes of the connector on the yellow and black cable.
- With the reset wire in place, reconnect the batteries. (The LED will go GREEN)
- Press the # key (The LED will go RED and then back to GREEN)
- Remove the reset wire
- The lock is now reset

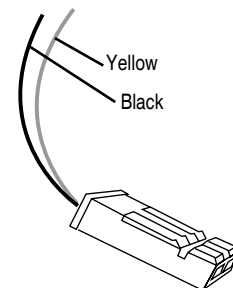

Glossary:

Access Code: Numeric or alphanumeric data which when correctly entered into a keypad, allows authorized entry into a controlled area without causing an alarm condition.

Access Control: The control of persons, vehicles and materials through entrance and exit of a protected area utilizing hardware systems specialized to control and monitor the movement into, out of, or within the protected area.

Audit Trail: A historical record sequentially accounting for all activities with an access control system. Such a records allows reconstruction and analysis of events during a given time period.

ESD: Electro Static Discharge.

Fail safe lockset: A type of lockset that unlocks when a power failure occurs.

Fail secure lockset: A type of lockset that locks when a power failure occurs.

Infrared (IR): Light waves that are too low frequency to be seen by the unaided eye.

Keypad: A device for inputting information into a computer controlled system for the purposes of arming and disarming an alarm system or operating an access control system.

Multiple Key Depressions: The pressing of more than one key simultaneously.

PIN: This is the Personal Identification Number. This number can be a combination of digits and letters, increasing the overall number of code possibilities.

Tailgating: In access control, tailgating is the act of one or more individuals entering a controlled area by using a single code. Also known as piggybacking.

UID: This is the User Identification Number. A unique number assigned to each User. The UID has a length of 2 to 4 digits.

Terminator: The “*” key acts as the terminator which functions similar to the “enter” key on a standard computer keyboard. It is also pressed after a code is entered to gain access.

Programming Key: The “#” key is the programming key. Note that the “#” key is used during the initialization process for the lock GGM and to enter program mode.

TROUBLESHOOTING GUIDE FOR THE i-Qwik DATA LOCKSET:

Set Up:

Q The factory code will not open the lock.

A *The factory code will not give you access to the lock at any time. This code is only used to set up the lock, the first code that will open the lock is your GGM code.*

Adding Users:

Q I have installed Users and some of them do not have access.

A *You may have exceeded the maximum users.*

Q My GGM code is set to 3 digits for UID and the PIN is 3 digits. Can I set my Users up to have a PIN of 4 digits?

A *No, the Great Grand Master code length sets up the format for all other Users in the system.*

Q I am trying to add a User but when I enter the Group number, I get a red LED.

A *This indicates that the Users UID is already in memory. Each UID must be unique.*

Programming / Scheduling:

Q I have entered a Group or User schedule between 9 a.m. and 5 p.m. and now my other Users don't have access.

A *If no schedules are set everyone has 24 hour access with their valid code. Once any schedules have been set the rules of the lock are changed and schedules must be set to give Users access.*

Q When I try to enter in a User or Group schedule I get a red light.

A *The User and Group schedules will not work with a basic schedule. If a basic schedule is currently set you will receive an error. You will also receive an error if you are not at the minimum security level required to program that function.*

INDEX

A	
Access, Deny/Restore Groups	Function 10 4
Access Level, Set	Function 11 4
Audio, Lock	Function 34 5
Audit Trail, Download	Function 15 9
B	
Basic Schedule	Function 02 8
Battery Information 11
Battery Status Check	Function 17 10
C	
Connection Diagram 11
D	
Date/Format, Set,	Function 13 7
Deny Access to Selected Groups	Function 10 4
Disable/Enable Three Strike Lockout	Function 40 6
Download Audit Trail	Function 15 9
E	
Entry, Multiple Codes	Function 33 4
Enable/Disable Three Strike Lockout	Function 40 6
F	
Fail Safe/Secure	Function 36 5
Factory Code 1
Function 01, Adding/Deleting User Codes 2-3
Function 02, Basic Schedule 8
Function 03, Group Schedule 8
Function 04, User Schedule 8
Function 05, Passage Schedule 8
Function 06, Temporary User Schedule 9
Function 07, Change Group Association 4
Function 08, Change User PIN 3
Function 09, Holiday Maintenance 9
Function 10, Deny/Restore Group Access 4
Function 11, Set Access Level 4
Function 12, Set Time 7
Function 13, Set Date 7
Function 14, Upload Lock Information 10
Function 15, Download Audit Trail 9
Function 16, Clear Memory 10
Function 17, Battery Status Check 10
Function 18, Define Open Time 4
Function 20, Memory Upgrade 10
Function 30, Manual Passage Mode 5
Function 31, First Supervisor to Arrive 9
Function 32, PIN Only Entry 3
Function 33, Multiple Code Entry 4
Function 34, Lock Audio 5
Function 35, Relay State Selection 5
Function 36, Fail Safe/Fail Secure 5
Function 37, Terminator On/Off 6
Function 38, Panic Alarm 6
Function 39, Privacy Mode 6
G	
GGM Code 2
Group Association, Change	Function 07 4
Group Numbers 2
Group Security Levels 2
Group Schedule	Function 03 8
H	
Holiday Maintenance	Function 09 9
I	
Initialize Lock ID 2
Initialize Great Grand Master 2
K	
Keypad Information 1
L	
Lockout, Three Strike, Disable/Enable	Function 40 6
M	
Manual Passage Mode	Function 30 5
Memory Upgrades	Function 20 10
Memory, Clear	Function 16 10
Multiple Code Entry	Function 33 4
Multiple Key Depressions 12
O	
Open Time, Define	Function 18 4
P	
Panic Alarm	Function 38 6
Passage Mode, Manual	Function 30 5
PIN Number 2-3
PIN, Change User	Function 08 3
PIN Only Entry,	Function 32 3
Privacy Mode	Function 39 6
Programming Key 2
R	
Relay State Selection	Function 35 5
Resetting the i-Qwik DATA back to Factory Default 11
Restore/Deny Group Access	Function 10 4
S	
Schedule (Passage Mode)	Function 05 8
Schedule (Basic)	Function 02 8
Schedule (Group)	Function 03 8
Schedule (Temporary User)	Function 06 9
Schedule (User)	Function 04 8
Secretary's Button	Function 39 6
Supervisor To Arrive, First,	Function 31 9
T	
Temporary User Schedule,	Function 06 8
Terminator Key 1
Terminator On/Off	Function 37 6
Three Strike Lockout, Disable/Enable	Function 40 6
Time, Define Open	Function 18 4
Time, Set	Function 12 7
Troubleshooting 12
U	
Upgrade Memory	Function 20 10
Upload Lock Information	Function 14 10
User Identification Code (UID) 1
User PIN, Change	Function 08 3
User Schedule	Function 04 8
Users, Adding	Function 01 2-3
User Code Definitions 1

For more information about the i-Qwik Line,
the i-Que series, the complete Marks USA product line,
templates and manuals
visit our website @ www.marksusa.com

Distributed by:

For i-Qwik/i-Que Tech Support Call:

Toll Free: 800 • 526 • 0233

In N.Y.: 631 • 225 • 5400

Fax: 631 • 225 • 6136

LIVE TECH SUPPORT 8am to 8pm EST Mon - Fri

Email: techsupport@marksusa.com

